

December 2015



SPECIALITY

STAKED IN U-JOINTS

Manufacturer of Driveline Components
1500 11th Avenue Rockford, Illinois 61104
Phone (815) 962-1411 Fax (815) 965-4857


Speciality "STAKED-IN" Universal Joints...

For over forty years automakers have decreased assembly time and cut production cost by crimping universal joints into the driveline assemblies. According to the manufacturer the joints are "STAKED-IN" and non-replaceable.

RDL Part No.	A Bearing Dia.	BI/BO Lockup
430-8	.823	1.285 - (I)
430-9	.791	1.285 - (I)
430-9A	.791	1.315 - (I)
430-9B	.791	1.335 - (I)
430-10	.867	1.400 - (I)
430-10A	.867	1.515 - (I)
430-10B	.867	1.725 - (I)
430-10C	.867	1.670 - (I)
430-10D	.867	1.575 - (I)
Combination Joint		1.715 - (I)

RDL Part No.	A Bearing Dia.	BI/BO Lockup
430-11	.947	1.900 - (I)
430-11A	.947	1.641 - (I)
430-12	.972	1.641 - (I)
430-12A	1.098	1.995 - (I)
430-12B	.972	1.730 - (I)
430-14*	1.066	1.780 - (I)
430-15	1.066	3.787 - (O)

* See explanation under application listing.

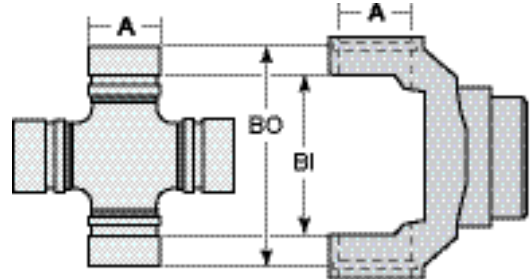

Measure Twice!!!

Take the time to double check the application before you press or cut out your original equipment u-joints... As hard as we try to provide you with the most accurate fitment information you should always know before you cut that the part you are replacing is going to solve the problem...

430-8

Toyota Rav 4.....2006-13

430-9

Datsun 12001971-73
 Datsun B210.....1974-82
 Subaru Justy.....1989-94

430-9A

Honda CRV2002-06

430-9B

Honda CRV1997-01

430-10

Chevy Equinox2007
 Chevy Equinox 3.4L (Exc. 3.6L)2008-09
 Jaguar XJ6-3 Bolt Fling.....1988-89
 Lexus RX3001999-03
 Lexus RX3302004-06
 Lexus RX350.....2007-09
 Nissan 200SX.....1978-84
 Nissan 240SX.....1989-93
 Nissan 280ZX.....1976-84
 Nissan 810.....1977-80
 Nissan Maxima1977-80

430-10 cont.

Nissan Murano2006-07
 Nissan Pickup D211986-89
 Pontiac Torrent2007
 Pontiac Torrent 3.4L (Exc. 3.6L)2008-09
 Subaru 3 Door Coupe.....1986-89
 Subaru Baja.....2003-06
 Subaru Forester.....1998-05
 Subaru Forester.....2009-13
 Subaru Hatchback1985-89
 Subaru Impreza2008-14
 Subaru Legacy1990-99
 Subaru Legacy Outback1995-09
 Subaru Loyale1990-93
 Subaru Sedan.....1985-89
 Subaru SVX.....1992-96
 Subaru Tribeca2006-14
 Subaru Wagon.....1985-89
 Subaru XT/XT6.....1985-90
 Toyota Camry All-Trac1988-91
 Toyota Celica1981-85
 Toyota Corolla.....1981-85
 Toyota Corolla All-Trac.....1988-92
 Toyota Cressida.....1985-88
 Toyota Highlander (exc. Hybrid)2001-07

Speciality "STAKED-IN" Universal Joints...

For over forty years automakers have decreased assembly time and cut production cost by crimping universal joints into the driveline assemblies. According to the manufacturer the joints are "STAKED-IN" and non-replaceable.

430-10 cont.

Toyota Previa.....	1991-96
Toyota Sienna AWD.....	2004-10
Toyota Rav 4.....	1996-05

430-10A

Mazda Miata.....	1990-05
Mazda RX-7 (Exc. 87-91 Turbo)....	1984-91
Subaru Forester.....	2006-08

430-10B

Merkur Scorpio.....	1988-89
---------------------	---------

430-10C

Honda Civic Wagon 4WD.....	1988-91
----------------------------	---------

430-10D

Suzuki SX4 AWD.....	2007-09
---------------------	---------

430-11

BMW 735i.....	1987-92
BMW 750i.....	1988-94
BMW M5.....	1991-94
Diahsu Rocky (Rear).....	1990-92
Mazda 929.....	1988-95
Mazda B2000.....	1979-84
Mazda B2000.....	1986-89
Mazda B2200.....	1979-84
Mazda B2200.....	1987-93
Mazda B2600.....	1987-93
Mazda MPV (2WD).....	1989-93
Mazda RX7 Turbo.....	1987-91

430-11A

BMW 535i.....	1989-93
Honda Ridgeline.....	2006
Nissan 300ZX (Exc. Twin Turbo)...	1984-89

430-12

Nissan 300ZX (Exc. Twin Turbo)...	1990-96
Nissan 300ZX (Twin Turbo).....	1987-89
Nissan Pathfinder 4x4 (Rear).....	1991-95
Nissan Pickup 4x4 (Rear).....	1991-93
Nissan Pickup 2WD 4 cyl.	1990-94
Toyota Cressida.....	1989-92

430-12A

BMW 740i.....	1993-94
BMW 740iL.....	1993-94
Infinity Q45.....	1990-96
Nissan 300ZX (Twin Turbo).....	1990-96

430-12B* (call for availability)

Honda Ridgeline.....	2007-08
----------------------	---------

430-14*

Jeep Commander*.....	2006-10
Jeep Grand Cherokee*.....	2005-10

**To use this replacement u-joint you must be able to machine the inside dimension to 1.780" on the OE steel flange yoke. If you are not able to precisely machine the original flange yoke, RDL offers a new flange with the correct dimensions to work with the 430-14 U-Joint. No machining of the aluminum weld yoke is necessary as long as its not worn.*

Part Number- Breif Description

414-2-3350 - Conv. Flange -Rear End
414-2-3351 - Conv. Flange -Transfer Case (Damper)

430-15

Ford F150.....	2004-05
Lincoln Mark LT.....	2004-05
Lincoln Navigator.....	2003-06

Manufacturer of Driveline Components
1500 11th Avenue Rockford, Illinois 61104
Phone (815) 962-1411 Fax (815) 965-4857