

# ***ROCKFORD***

---

## ***Drive Line***



***CV Joints, Boot Kits & Crimping Fixtures***

MANUFACTURER OF DRIVELINE COMPONENTS  
1500 11TH AVENUE ROCKFORD, ILLINOIS 61104  
PHONE (815) 962-1411 FAX (815) 965-4857  
[RockfordDriveLine.com](http://RockfordDriveLine.com)



# **ROCKFORD** ***Drive Line***

## TABLE OF CONTENTS

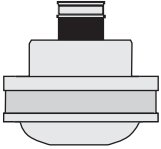
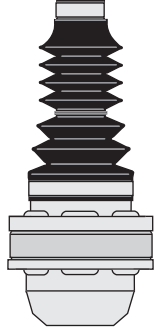
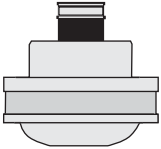
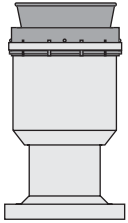
	PAGE
CRIMPING FIXTURES	10
HIGH SPEED BOOT KITS	8-9
HIGH SPEED CV JOINTS	4-7

Notice: The data contained in this catalog has been thoroughly checked for accuracy, however we cannot assume any responsibility for errors, omissions or typographical mistakes that may appear.

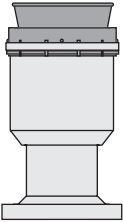
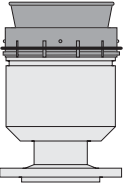
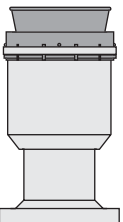
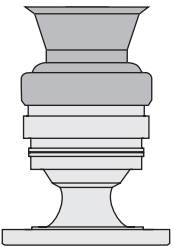
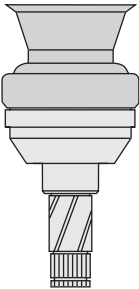
All data is property of ©Rockford Drive Line and may not be duplicated or used in any way without written authorization.

# High Speed CV Joints...

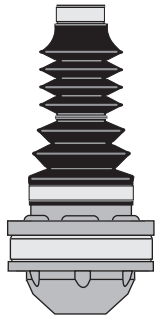
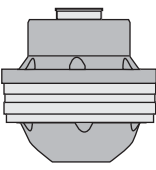
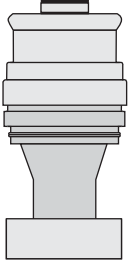
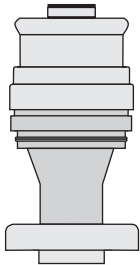
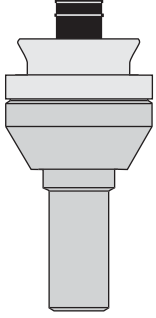
Rockford's NEW "FULLY LOADED" C.V. joints are manufactured to meet the design requirements of the original equipment manufacturer. The new assembly includes our super-strength OE designed housing with precision-engineered internal components and a new boot, grease and hardware required to do the job right.

<b>Rkfd No.</b>	<b>Applications</b> .....	<b>Years</b>	
<b>361-80**</b>	Jeep Grand Cherokee- (Rear Joint) ..... Jeep Liberty- (Rear Joint) .....	1999-2004 2002-2005	
<p><b>Note: This joint appears to be the same as the 361-80D but the inner race is longer on this application.</b></p>			
<b>361-80B**</b>	Jeep Grand Cherokee- (Front Joint) ..... Jeep Grand Cherokee- 4.7L ..... Jeep Liberty- (Front Joint) .....	1999-2001 2002-2004 2002-2005	
<b>361-80D**</b>	Dodge Dakota (4WD) ..... Dodge Durango (4WD) ..... Jeep Grand Cherokee- (Rear Joint) .....	2001-2005 2001-2003 2005	
<p><b>Note: This joint appears to be the same as the 361-80 but the inner race is shorter on this application.</b></p>			
<b>419-80A</b>	Chevrolet Astro Van (AWD)– <b>W/2.865" Pilot</b> ..... GMC Safari Van (AWD)– <b>W/2.865" Pilot</b> .....	1990-1991 1990-1991	

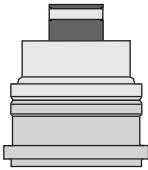
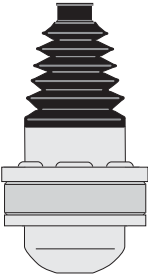
# High Speed CV Joints...

	<p><b>419-80B</b> Chevrolet Astro Van (AWD)– <i>W/2.00" Pilot</i> ..... 1990-1991            Ford Bronco II (<b>Exc.</b> 6/89-90 2WD) ..... 1985-1990            GMC Safari Van (AWD)– <i>W/2.00" Pilot</i> ..... 1990-1991</p>
	<p><b>419-80C</b> Jeep Cherokee ..... 1984-1987            Jeep Wagoneer ..... 1984-1987</p>
	<p><b>419-80D</b> GMC Syclone ..... 1991-1993            GMC Typhoon ..... 1991-1993</p>
	<p><b>421-80</b> Chevrolet Astro Van (AWD) ..... 1992-1998            Chevrolet Blazer (AWD Models) ..... 1995-1997            GMC Jimmy (AWD) ..... 1995-1997            GMC Safari Van (AWD) ..... 1992-1998            Pontiac 6000 (AWD) ..... 1989-1990            Oldsmobile Bravada ..... 1991-1997</p>
	<p><b>421-80C**</b> Chevrolet Camaro V6 ..... 1993-2002            Pontiac Firebird V6 ..... 1993-2002</p>

# High Speed CV Joints...

<b>Rkfd No.</b>	<b>Applications</b>	<b>Years</b>	
<b>424-80</b>	Jeep Grand Cherokee .....	1993-1998	
<b>427-80</b>	Ford Explorer ..... Ford Ranger (4WD) ..... Lincoln Aviator (4WD) ..... Mazda B-3000 Pickup (4WD) ..... Mazda B-4000 Pickup (4WD) ..... Mercury Mountaineer .....	1997-2005 1998-2005 2003-2005 1998-2003 1998-2005 1997-2005	
<b>429-80</b>	Chevrolet Blazer W/ Electronic T.C. .... Chevrolet Blazer (4WD) ..... Chevrolet S-10 Pickup W/ Electronic T.C. .... Chevrolet S-10 Pickup (4WD) ..... GMC Jimmy W/ Electronic T.C. .... GMC Jimmy (4WD) ..... GMC S-15 Pickup W/ Electronic T.C. .... GMC S-15 Pickup (4WD) ..... Isuzu Hombre (4WD) .....	1998-2005 1995-1997 1997-2004 1994-1996 1998-2005 1995-1997 1997-2004 1994-1996 1998-1999	
<b>429-80A</b>	Buick Rainer ..... Chevrolet Astro Van & GMC Safari Van ..... Chevrolet Blazer W/ Push Button T.C. .... Chevrolet S-10 Pickup W/ Push Button T.C. .... Chevrolet Trailblazer ..... GMC Envoy ..... GMC Jimmy W/ Push Button T.C. .... GMC S-15 Pickup & Sonoma W/ Push Button T.C. .... Isuzu Ascender ..... Oldsmobile Bravada .....	2004-2005 1999-2005 1998-2005 1997-2004 2002-2005 1998-2005 1998-2005 1997-2004 2003-2005 1998-2004	
<b>435-80**</b>	Dodge Ram 1500 Pickup ..... Dodge Durango .....	2002-2005 2004-2005	

# High Speed CV Joints...

	<p><b>437-80**</b> Chevrolet Colorado ..... 2004-2005          GMC Canyon ..... 2004-2005          Hummer H3..... 2006-2007</p>
	<p><b>450-80**</b> Ford Escape (AWD) Exc. Hybrid ..... 2005          Ford Escape (AWD) ..... 2001-2004          Mercury Mariner ..... 2005          Mazda Tribute ..... 2001-2004</p>

\*\* New number - Call sales at 1-800-728-7237 for availability

# High Speed Boot Kits...

**Over the years a number of original equipment manufacturers have introduced driveshafts that incorporate cage & ball or cross groove constant velocity joint technology. According to many of these manufacturers, these driveshafts are non-repairable and no replacement components are available. Rockford manufactures HIGH SPEED BOOTS for a majority of these "non-repairable" applications. All Rockford DURA-BOOTS have been designed and manufactured to meet or exceed original equipment manufacturer specifications.**

Boot Kits include:

1-DURA-BOOT, 2-Pkgs. Grease, Installation Instructions & Any Misc. Hardware Required.

## THE INDUSTRY'S BROADEST COVERAGE

<b>Kit Number</b>	<b>Application</b>	<b>Year</b>
<b>320-21C</b>	BMW 525i .....	1989-1992
	BMW 533i .....	1983-1984
	BMW 535i .....	1985-1992
	BMW 635Csi .....	1983-1986
	BMW 735iL .....	1989-1991
<b>361-21</b>	Dodge Dakota (4WD) .....	2001-2005
	Dodge Durango (4WD) .....	2001-2003
	Jeep Grand Cherokee (4WD) .....	1999-2005
	Jeep Liberty- (Rear Joint) .....	2002-2005
<b>406-21</b>	(Fits 1210 Series Yokes & 2" Tube)	
<b>408-21</b>	Ford Bronco II (Slip Yoke) .....	1983-1985
	Ford Ranger W/108" WB (Slip Yoke) .....	1983-1989
	(Fits 1210 Series Yokes & 2 1/2" Tube)	
<b>419-21</b>	Chevrolet Astro Van (AWD) .....	1990-1991
	Ford Bronco II ( <b>Exc.</b> 6/89-90 2WD) .....	1985-1990
	GMC Safari Van (AWD) .....	1990-1991
	Jeep Cherokee .....	1984-1987
	Jeep Wagoneer .....	1984-1987
<b>419-21A</b>	GMC Syclone .....	1991-1993
	GMC Typhoon .....	1991-1993
<b>420-21</b>	Ford Bronco II 2WD (6/89-up) .....	1989-1990
<b>421-21*</b>	Chevrolet Astro Van (AWD) .....	1992-1998
	Chevrolet Blazer (AWD) .....	1995-1997
	GMC Jimmy (AWD) .....	1995-1997
	GMC Safari Van (AWD) .....	1992-1998
	Pontiac 6000 (AWD) .....	1989-1990
	Oldsmobile Bravada .....	1991-1997

\*Crimping Fixture is available but not required to service these kits (see page 10)

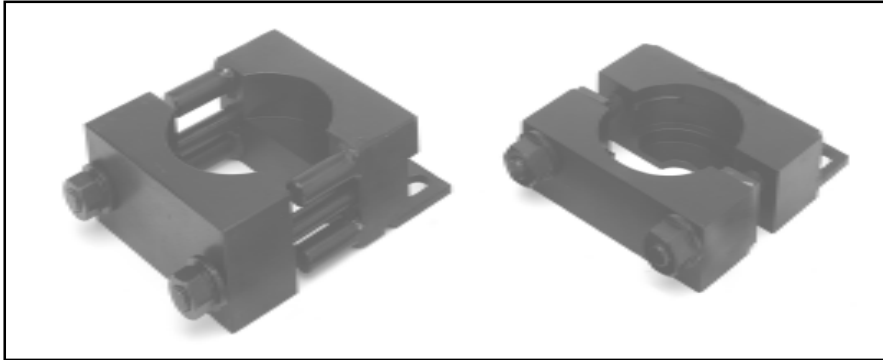
## THE INDUSTRY'S BROADEST COVERAGE

<b>Kit Number</b>	<b>Application</b>	<b>Year</b>
<b>421-21C*</b>	Chevrolet Camaro V6 .....	1993-2002
	Pontiac Firebird V6 .....	1993-2002
<b>424-21*</b>	Jeep Grand Cherokee Auto Trans .....	1993-2001
	Jeep Grand Cherokee 4.7L .....	2002-2004
	Jeep Liberty .....	2002-2005
<b>427-21A</b>	Ford Explorer (4WD) .....	1997-2005
	Ford Ranger (4WD) .....	1998-2005
	Lincoln Aviator (4WD) .....	2003-2005
	Mazda B-3000 Pickup (4WD) .....	1998-2003
	Mazda B-4000 Pickup (4WD) .....	1998-2005
	Mercury Mountaineer (4WD) .....	1997-2005
<b>429-21*</b>	Buick Rainer .....	2004-2005
	Chevrolet Astro Van (AWD) .....	1999-2005
	Chevrolet Blazer (4WD) .....	1995-2005
	Chevrolet Trailblazer .....	2002-2005
	Chevrolet S-10 Pickup (4WD) .....	1994-2004
	GMC Envoy .....	1998-2004
	GMC Jimmy (4WD) .....	1995-2005
	GMC Safari Van .....	1999-2005
	GMC S-15 Pickup (4WD) .....	1994-2004
	Isuzu Ascender (4WD) .....	2003-2005
	Isuzu Hombre (4WD) .....	1998-2000
Oldsmobile Bravada (4WD) .....	1998-2004	
<b>804-21*</b>	BMW 735i (Stud Style CV) .....	1987-1992
	BMW 735iL (Stud Style CV) .....	1988-1989
	BMW 750iL (Stud Style CV) .....	1988-1991
	BMW M5 (Stud Style CV) .....	1991
<b>804-21C</b>	BMW 735i (Thru-Bolt Style CV) .....	1987-1992
	BMW 735iL (Thru-Bolt Style CV) .....	1988-1989
	BMW 750iL (Thru-Bolt Style CV) .....	1988-1991
	BMW M5 (Thru-Bolt Style CV) .....	1991
<b>805-21A*</b>	Mazda MPV .....	1989-1991
	Subaru SVX .....	1992-1993
<b>806-21A</b>	Toyota Camry (All-Trac) .....	1988-1991
<b>808-21A</b>	Nissan 300ZX Twin Turbo .....	1990-1996
	BMW 740i W/ E32 Body Style .....	1993-1994
	BMW 740iL W/ E32 Body Style .....	1993-1994

\*Crimping Fixture is available but not required to service these kits (see pg 10)

# High Speed Boot Crimping Fixtures...

Rockford now offers a wide selection of fixtures that will professionally crimp high speed DURA-BOOTS onto the original equipment housing. Each fixture assures you of a positive seal that keeps lubricants in and contaminants out.



<b>Crimping Fixture</b>	<b>Boot Kit Number</b>	<b>Applications</b>	<b>Years</b>
<b>100-14TG</b>	421-21	Chevrolet Astro Van (AWD) .....	1992-1998
		Chevrolet Blazer (AWD) .....	1995-1997
		GMC Jimmy (AWD) .....	1995-1997
		GMC Safari Van (AWD) .....	1992-1998
		Pontiac 6000 (AWD) .....	1989-1990
		Oldsmobile Bravada.....	1991-1997
<b>100-14TG</b>	421-21C	Chevrolet Camaro V6 .....	1993-2002
		Pontiac Firebird V6 .....	1993-2002
<b>100-14TN</b>	804-21	BMW 735i (Stud Style CV) .....	1987-1992
		BMW 735iL (Stud Style CV) .....	1988-1989
		BMW 750iL (Stud Style CV) .....	1988-1991
		BMW M5 (Stud Style CV) .....	1991
<b>100-14TO</b>	424-21	Jeep Grand Cherokee Auto Trans .....	1995-2001
		Jeep Grand Cherokee 4.7L .....	2002-2004
		Jeep Liberty .....	2002-2005
<i><u>Crimps the boot flange &amp; end cap in one step</u></i>			
<b>100-14TP</b>	429-21	Buick Rainer.....	2004-2005
		Chevrolet Astro Van (AWD) .....	1999-2005
		Chevrolet Blazer (4WD) .....	1995-2005
		Chevrolet Trailblazer .....	2002-2005
		Chevrolet S-10 Pickup (4WD) .....	1994-2004
		GMC Envoy .....	1998-2004
		GMC Jimmy (4WD).....	1995-2005
		GMC Safari Van .....	1999-2005
		GMC S-15 Pickup (4WD) .....	1994-2004
		Isuzu Ascender (4WD) .....	2003-2005
		Isuzu Hombre (4WD) .....	1998-2000
Oldsmobile Bravada (4WD) .....	1998-2004		
<b>100-14TQ</b>	805-21A	Mazda MPV .....	1989-1991
		Subaru SVX .....	1992-1993



MANUFACTURER OF DRIVELINE COMPONENTS  
1500 11TH AVENUE ROCKFORD, ILLINOIS 61104  
PHONE (815) 962-1411 FAX (815) 965-4857  
[RockfordDriveLine.com](http://RockfordDriveLine.com)