

ROCKFORD

Drive Line



***CV Joints, Splined Stubs, Boot Kits
& Crimping Fixtures***

MANUFACTURER OF DRIVELINE COMPONENTS
1500 11TH AVENUE ROCKFORD, ILLINOIS 61104
PHONE (815) 962-1411 FAX (815) 965-4857
RockfordDriveLine.com

ROCKFORD

Drive Line

TABLE OF CONTENTS

	PAGE
CRIMPING FIXTURES	13-14
SPLINED STUBS	9
HIGH SPEED BOOT KITS	10-12
HIGH SPEED CV JOINTS	4-8
REFERENCE GUIDE	15

Notice: The data contained in this catalog has been thoroughly checked for accuracy, however we cannot assume any responsibility for errors, omissions or typographical mistakes that may appear.

All data is property of ©Rockford Drive Line and may not be duplicated or used in any way without written authorization.

High Speed CV Joints...

Rockford's NEW "FULLY LOADED" C.V. joints are manufactured to meet the design requirements of the original equipment manufacturer. The new assembly includes our super-strength OE designed housing with precision-engineered internal components and a new boot, end cap, grease and hardware required to do the job right.

Rkfd No.

Applications Years

361-80 (Rear Joint) - Fixed Design

Jeep Grand Cherokee..... 1999-2004
 Jeep Liberty 2002-2007

Note: This joint appears to be the same as the 361-80D but the inner race is longer on this application.



361-80B (Front Joint) - Plunge Design

Jeep Grand Cherokee..... 1999-2000
 Jeep Grand Cherokee- 4.0L..... 2001-2004
 Jeep Liberty 2002-2007



361-80D

Dodge Dakota (4WD)..... 2001-2007
 Dodge Durango (4WD) 2001-2003
 Jeep Commander 2006-2010
 Jeep Grand Cherokee..... 2005-2006
 Jeep Grand Cherokee (Exc. 3.0L) 2007-2010
 Mitsubishi Raider 2006-2007

Note: This joint appears to be the same as the 361-80 but the inner race is shorter on this application.



High Speed CV Joints...



421-80

Chevrolet Astro Van (AWD)..... 1992-1998
 Chevrolet Blazer (AWD Models) ... 1995-1997
 GMC Jimmy (AWD)..... 1995-1997
 GMC Safari Van (AWD) 1992-1998
 Pontiac 6000 (AWD) 1989-1990
 Oldsmobile Bravada..... 1991-1997



421-80C

Chevrolet Camaro V6 1993-2002
 Pontiac Firebird V6 1993-2002



424-80

Jeep Grand Cherokee..... 1993-1998



427-80

Ford Explorer 1997-2005
 Ford Ranger (4WD) 1998-2009
 Lincoln Aviator (4WD) 2003-2005
 Mazda B-3000 Pickup (4WD) 1998-2003
 Mazda B-4000 Pickup (4WD) 1998-2009
 Mercury Mountaineer 1997-2005

High Speed CV Joints...

429-80

Chevy Blazer ¹	1998-2005
Chevy Blazer (4WD)	1995-1997
Chevy S-10 Pickup ¹	1997-2004
Chevy S-10 Pickup (4WD)	1994-1996
GMC Envoy ¹	1998-2000
GMC Jimmy ¹	1998-2005
GMC Jimmy (4WD)	1995-1997
GMC S-15 Pickup ¹	1997-2004
GMC S-15 Pickup (4WD)	1994-1996
Isuzu Hombre (4WD)	1998-2000

¹ - Application is W/Electronic Transfer Case



429-80A

Buick Rainer.....	2004-2007
Chevy Astro & GMC Safari	1999-2005
Chevy Blazer & GMC Jimmy ²	1998-2005
Chevy S-10 Pickup ²	1997-2004
Chevy Trailblazer	2002-2009
GMC Envoy ²	1999-2009
GMC S-15 Pickup & Sonoma ²	1997-2004
Isuzu Ascender	2003-2008
Oldsmobile Bravada.....	1998-2004
Saab 9-7X.....	2005-2006

² - Application is W/Push Button Transfer Case



435-80

Dodge Ram 1500 Pickup	2002-2006
Dodge Durango.....	2004-2006



437-80

Chevrolet Colorado	2004-2010
GMC Canyon	2004-2010
Hummer H3.....	2006-2010
Isuzu I350	2006
Isuzu I370	2007-2008



High Speed CV Joints...



450-80

Saturn Vue (AWD)..... 2002-2007



451-80

Pontiac Solstice (MT)..... 2006-2009

Saturn Sky (MT)..... 2007-2009



452-80

Chevrolet Equinox..... 2005-2006

Pontiac Torrent..... 2006



454-80

Ford Escape (AWD) Exc. Hybrid) . 2005-2007

Ford Escape (AWD)..... 2001-2004

Mercury Mariner 2005-2007

Mazda Tribute 2001-2006

High Speed CV Joints...

456-80 - (Fixed End)

Ford Mustang (4.6L 3V) 2005-2010



456-80B - (Plunge End)

Ford Mustang (4.6L 3V) 2005-2010



457-80 - (Fixed End)

Ford Expedition 2007-2009
Ford F150 6 spd (6R80) 2009-2010
Lincoln Navigator 2007-2009



457-80B - (Plunge End)

Ford Expedition 2007-2009
Ford F150 6 spd (6R80) 2009-2010
Lincoln Navigator 2007-2009



Replacement Splines for High Speed CV Joints...



RDL Part Number	Tooth Count	Fits Tube Dia/Wall	Butt Diameter	End of Spline to Weld
361-31	25T/1.075	OEM	1.615	4.750*
361-31A	25T/1.075	2.000 / .120	1.765	4.250
361-31B	25T/1.075	OEM	1.615	8.875*
361-31C	25T/1.075	2.000 / .120	1.765	8.375
361-31D	25T/1.075	OEM	1.788	4.750*
361-31E	25T/1.075	2.000 / .120	1.765	4.250
421-31	22T/0.995	2.000 / .120	1.765	4.375
421-31A	22T/0.995	1.250 / .189	0.890	4.375
421-31C	22T/0.995	2.750 / .065	2.625	4.375
427-31	27T/1.125	2.000 / .120	1.765	4.875
429-31	22T/0.995	2.000 / .083	1.850	4.375
435-31	28T/1.195	OEM	2.215	5.250*
435-31A	28T/1.195	2.500 / .083	2.344	5.250
437-31	34T/1.085	2.000 / .065	1.889	4.500

* Stub made 1/2" longer then OEM to allow for cut off

CV Joint Kit	Stub to Use	CV Joint Kit	Stub to Use
361-80	361-31 / 361-31B	427-80	427-31
361-80B	361-31A / 361-31C	429-80	429-31
361-80D	361-31D / 361-31E	429-80A	429-31 / 421-31A
421-80	421-31 / 421-31A	435-80	435-31 / 435-31A
421-80C	421-31C	437-80	437-31

High Speed Boot Kits...

Over the years a number of original equipment manufacturers have introduced drive-shafts that incorporate cage & ball or cross groove constant velocity joint technology. According to many of these manufactures, these driveshafts are non-repairable and no replacement components are available. Rockford supplies **HIGH SPEED BOOTS** for a majority of these “non-repairable” applications.

Boot Kits include:

1-Boot Assembly, End Cap, Grease, Installation Instructions & Any Misc. Hardware Required.

THE INDUSTRY’S BROADEST COVERAGE

Kit Number	Application	Year
320-21C	BMW 525i	1989-1992
	BMW 533i	1983-1984
	BMW 535i	1985-1992
	BMW 635Csi	1983-1986
	BMW 735iL.....	1989-1991
361-21*	Jeep Grand Cherokee (4WD)	1999-2004
	Jeep Liberty- (Rear Joint)- Fixed Design	2002-2007
361-21B*	Jeep Grand Cherokee (4WD)	1999-2004
	Jeep Liberty- (Front Joint)- Plunge Design	2002-2007
361-21D*	Dodge Dakota (4WD).....	2001-2007
	Dodge Durango (4WD)	2001-2003
	Jeep Commander (4WD).....	2007-2010
	Jeep Grand Cherokee (4WD)	2005-2010
	Mitsubishi Raider (4WD).....	2006-2007
406-21	(Fits 1210 Series Yokes & 2” Tube)	
408-21	Ford Bronco II (Slip Yoke).....	1983-1985
	Ford Ranger W/108” WB (Slip Yoke)	1983-1989
	(Fits 1210 Series Yokes & 2 1/2” Tube)	
419-21	Chevrolet Astro Van (AWD).....	1990-1991
	Ford Bronco II (Exc. 6/89-90 2WD)	1985-1990
	GMC Safari Van (AWD)	1990-1991
	Jeep Cherokee.....	1984-1987
	Jeep Wagoneer.....	1984-1987
419-21A	GMC Syclone.....	1991-1993
	GMC Typhoon.....	1991-1993

*Crimping Fixture is available but not required to service these kits (see pgs 13-14)

THE INDUSTRY'S BROADEST COVERAGE

Kit Number	Application	Year
420-21	Ford Bronco II 2WD (6/89-up).....	1989-1990
421-21*	Chevrolet Astro Van (AWD).....	1992-1998
	Chevrolet Blazer (AWD).....	1995-1997
	GMC Jimmy (AWD).....	1995-1997
	GMC Safari Van (AWD)	1992-1998
	Pontiac 6000 (AWD)	1988-1990
	Oldsmobile Bravada.....	1991-1997
421-21C	Chevrolet Camaro V6	1993-2002
	Pontiac Firebird V6	1993-2002
424-21*	Jeep Grand Cherokee Auto Trans	1993-1998
427-21A	Ford Explorer (4WD).....	1997-2005
	Ford Ranger (4WD)	1998-2009
	Lincoln Aviator (4WD)	2003-2005
	Mazda B-3000 Pickup (4WD)	1998-2003
	Mazda B-4000 Pickup (4WD)	1998-2009
	Mercury Mountaineer (4WD).....	1997-2005
429-21*	Buick Rainer.....	2004-2007
	Chevrolet Astro Van (AWD).....	1999-2005
	Chevrolet Blazer (4WD)	1995-2005
	Chevrolet Trailblazer	2002-2009
	Chevrolet S-10 Pickup (4WD).....	1994-2004
	GMC Envoy.....	1998-2009
	GMC Jimmy (4WD).....	1995-2005
	GMC Safari Van	1999-2005
	GMC S-15 Pickup (4WD).....	1994-2004
	Isuzu Ascender (4WD)	2003-2008
	Isuzu Hombre (4WD)	1998-2000
	Oldsmobile Bravada (4WD)	1998-2004
	Saab 9-7X	2005-2006
435-21*	Dodge Ram 1500 Pickup	2002-2006
	Dodge Durango.....	2004-2006
437-21*	Chevrolet Colorado	2004-2010
	GMC Canyon	2004-2010
	Hummer H3.....	2006-2010
	Isuzu I350	2006
	Isuzu I370	2007-2008
450-21*	Saturn Vue (AWD)	2002-2007
451-21	Pontiac Solstice (MT).....	2006-2009
	Saturn Sky (MT).....	2007-2009

*Crimping Fixture is available but not required to service these kits (see pgs 13-14)


THE INDUSTRY'S BROADEST COVERAGE

Kit Number	Application	Year
452-21*	Chevrolet Equinox.....	2005-2006
	Pontiac Torrent.....	2006
454-21*	Ford Escape.....	2001-2007
	Mercury Mariner.....	2005-2007
	Mazda Tribute.....	2001-2006
456-21	Ford Mustang (4.6L 3V)- Fixed End.....	2005-2010
456-21B	Ford Mustang (4.6L 3V)- Plunge End.....	2005-2010
457-21	Ford Expedition- Fixed End.....	2007-2009
	Ford F150 6 Spd (6R80)- Fixed End.....	2009-2010
	Lincoln Navigator- Fixed End.....	2007-2009
457-21B	Ford Expedition- Plunge End.....	2007-2009
	Ford F150 6 Spd (6R80)- Plunge End.....	2009-2010
	Lincoln Navigator- Plunge End.....	2007-2009
804-21*	BMW 735i (Stud Style CV).....	1987-1992
	BMW 735iL (Stud Style CV).....	1988-1989
	BMW 750iL (Stud Style CV).....	1988-1991
	BMW M5 (Stud Style CV).....	1991
804-21C	BMW 735i (Thru-Bolt Style CV).....	1987-1992
	BMW 735iL (Thru-Bolt Style CV).....	1988-1989
	BMW 750iL (Thru-Bolt Style CV).....	1988-1991
	BMW M5 (Thru-Bolt Style CV).....	1991
805-21A	Mazda MPV.....	1989-1991
	Subaru SVX.....	1992-1993
806-21A	Toyota Camry (All-Trac).....	1988-1991
808-21A	Nissan 300ZX Twin Turbo.....	1990-1996
	BMW 740i W/ E32 Body Style.....	1993-1994
	BMW 740iL W/ E32 Body Style.....	1993-1994

*Crimping Fixture is available but not required to service these kits (see pgs 13-14)

High Speed Boot Crimping Fixtures...

Rockford now offers a wide selection of fixtures that will professionally crimp high speed DURA-BOOTS onto the original equipment housing. Each fixture assures you of a positive seal that keeps lubricants in and contaminants out.

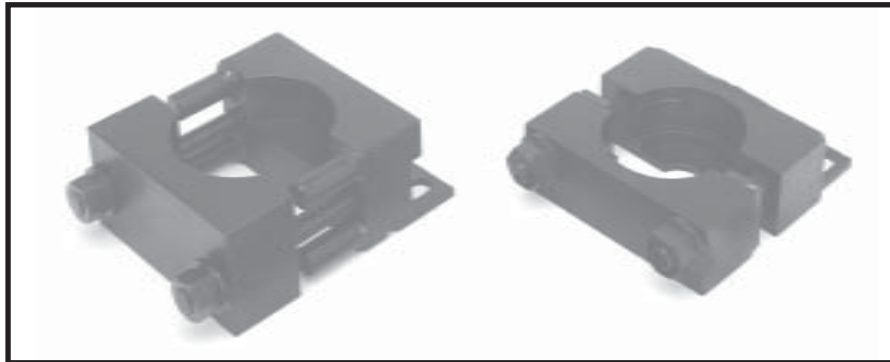


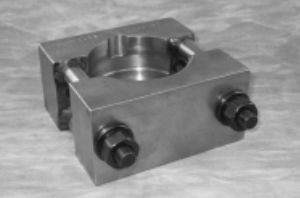


Crimping Fixture	Boot Kit Number	Applications	Years
100-14TG	421-21	Chevrolet Astro Van (AWD)	1992-1998
		Chevrolet Blazer (AWD)	1995-1997
		GMC Jimmy (AWD)	1995-1997
		GMC Safari Van (AWD)	1992-1998
		Pontiac 6000 (AWD)	1989-1990
		Oldsmobile Bravada	1991-1997
100-14TN	804-21	BMW 735i (Stud Style CV)	1987-1992
		BMW 735iL (Stud Style CV)	1988-1989
		BMW 750iL (Stud Style CV)	1988-1991
		BMW M5 (Stud Style CV)	1991
100-14TO	424-21	Jeep Grand Cherokee Auto Trans	1993-1998
		<u>Crimps the boot flange & end cap in one step</u>	
100-14TP	429-21	Buick Rainer	2004-2007
		Chevrolet Astro Van (AWD)	1999-2005
		Chevrolet Blazer (4WD)	1995-2005
		Chevrolet Trailblazer	2002-2009
		Chevrolet S-10 Pickup (4WD)	1994-2004
		GMC Envoy	1998-2009
		GMC Jimmy (4WD)	1995-2005
		GMC Safari Van	1999-2005
		GMC S-15 Pickup (4WD)	1994-2004
		Isuzu Ascender (4WD)	2003-2008
		Isuzu Hombre (4WD)	1998-2000
Oldsmobile Bravada (4WD)	1998-2004		
Saab 9-7X	2005-2006		
100-14TQ	361-21	Jeep Grand Cherokee	1999-2004
		Jeep Liberty- (Rear Joint)- Fixed Design	2002-2007
		<u>Crimps the boot flange & end cap in one step</u>	

High Speed Boot Crimping Fixtures...

Crimping Fixture	Boot Kit Number	Applications	Years
100-14TQ	361-21D	Dodge Dakota (4WD)	2001-2007
		Dodge Durango (4WD).....	2001-2003
		Jeep Commander (4WD)	2007-2010
		Jeep Grand Cherokee (4WD).....	2005-2010
		Mitsubishi Raider (4WD)	2006-2007
<u><i>Crimps the boot flange & end cap in one step</i></u>			
100-14TR	361-21B	Jeep Grand Cherokee (4WD).....	1999-2004
		Jeep Liberty- (Front Joint)- Plunge Design.....	2002-2007
<u><i>Crimps the boot flange & end cap in one step</i></u>			
100-14TS	437-21	Chevrolet Colorado	2004-2010
		GMC Canyon.....	2004-2010
		Hummer H3	2006-2010
		Isuzu I350.....	2006
		Isuzu I370.....	2007-2008
100-14TT	435-21	Dodge Ram 1500 Pickup	2002-2006
		Dodge Durango	2004-2006
100-14TU	450-21	Saturn Vue (AWD)	2002-2007
100-14TV	452-21	Chevrolet Equinox	2005-2006
		Pontiac Torrent	2006
100-14TW	454-21	Ford Escape	2001-2007
		Mercury Mariner	2005-2007
		Mazda Tribute.....	2001-2006

Reference Guide...

A handy guide for you to use when looking for the crimping fixture needed for a High Speed CV Joint or Boot Kit. Use it for finding what Boot Kit is used for a CV Joint or even when you want to know what spline to use when making a driveshaft assembly.

			
High Speed CV Joint Kits	Crimping Fixtures	Replacement Splines	High Speed CV Boot Kits
***	***	***	320-21C
361-80	100-14TQ	361-31	361-21
		361-31A	
361-80B	100-14TR	361-31B	361-21B
		361-31C	
361-80D	100-14TQ	361-31D	361-21D
		361-31E	
***	***	***	406-21
***	***	***	408-21
***	***	***	419-21
***	***	***	419-21A
***	***	***	420-21
421-80	100-14TG	421-31	421-21
		421-31A	
421-80C	***	421-31C	421-21C
424-80	100-14TO	***	424-21
427-80	***	427-31	427-21A
429-80	100-14TP	429-31	429-21
429-80A	100-14TP	429-31	429-21
		421-31A	
435-80	100-14TT	435-31	435-21
		435-31A	
437-80	100-14TS	437-31	437-21
450-80	100-14TU	***	450-21
451-80	***	***	451-21
452-80	100-14TV	***	452-21
454-80	100-14TW	***	454-21
456-80	***	***	456-21
456-80B	***	***	456-21B
457-80	***	***	457-21
457-80B	***	***	457-21B
***	100-14TN	***	804-21
***	***	***	804-21C
***	***	***	805-21A
***	***	***	806-21A
***	***	***	808-21A

MANUFACTURER OF DRIVELINE COMPONENTS
1500 11TH AVENUE ROCKFORD, ILLINOIS 61104
PHONE (815) 962-1411 FAX (815) 965-4857
RockfordDriveLine.com